

TRACEABLE® LOLLIPOP™ WATERPROOF/SHOCKPROOF THERMOMETER INSTRUCTIONS

SPECIFICATIONS

Range: -50 to 300°C,
-58 to 572°F

Resolution: 0.1°C from -20 to 200°C,
1°C outside this range

Accuracy: **Cat. No. 4371:**
±1.0°C between
-20 and 100°C

Cat. No. 4378:
±0.2°C between
-20 and 100°C

Sampling Rate: 1 sec


Unit diameter: 1.75²

Stem length: 8²

Stem diameter: 0.14²

Overall length: 10.5²

Weight: 0.8 ounces

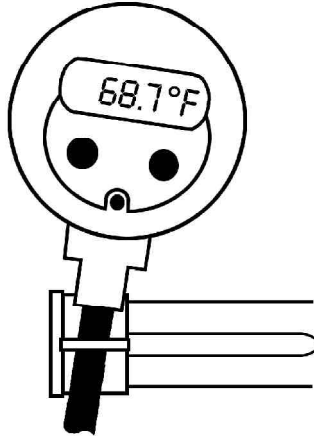

**Insert the probe into
the "loop" on the cover.
It makes a perfect holder.**

FEATURES

- Waterproof and shockproof
- Stainless steel sensor probe
- Max/Min memory recall
- °F/°C selectable
- One second sampling rate
- Protective plastic sleeve with clip and holder
- Low battery indicator

OPERATION

Remove Lollipop™ thermometer from the protective sheath. Press ON/OFF

button to activate. Press °F/°C button to switch between Fahrenheit and Celsius temperature. Insert probe into the material to be measured and read display.

MAX/MIN MEMORY

To view the minimum temperature reached since activating unit, press MAX/MIN button. "MIN" appears on the display to indicate the minimum temperature recorded. Press MAX/MIN button a second time within 3 seconds to view the maximum temperature reached since activating unit. "MAX" appears on the display to indicate the maximum temperature recorded.

NOTE:

Three seconds after pressing the MAX/MIN button, the unit automatically returns to current sampling mode. Indicators "MIN" and "MAX" are no longer displayed. Turn the unit OFF to reset max/min to current temperature.

ALL OPERATIONAL DIFFICULTIES

If this thermometer does not function properly for any reason, please replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

BATTERY REPLACEMENT

The Lollipop™ thermometer displays a low battery indication, "⬇️", when it is time to replace the battery.

Erratic readings, faint readings or no display are all indications that the battery must be replaced. Using a coin, turn the battery cover on back of the unit in the direction of the "open" arrow. Remove the exhausted battery and replace with a new battery. Make certain the positive (+) side is facing you. Replace the battery cover. Replacement battery Catalog No. 1102.

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

CONTROL COMPANY
4455 Rex Road
Friendswood, Texas 77546 USA
Ph. 281 482-1714 Fax 281 482-9448
E-mail sales@control3.com
www.control3.com

Control Company is ISO 9001 Quality-Certified by DNV and ISO 17025 accredited as a Calibration Laboratory by A2LA.

Cat. No. 4371 / 4378

Traceable® Lollipop Waterproof/Shockproof Thermometer Instructions

92-4371-00

Rev. 1 071204