

## Instructions for the Ampule Opener #7371



1. Insert the stem of the ampule into the open end of the ampule opener.



2. Score the stem by gently squeezing the opener while turning the ampule.



3. While firmly holding the ampule, push the ampule opener outward using your thumb and finger to break the stem of the ampule.



4. Push down on the ampule rod to eject the ampule head.



**Call Free: 1 800 848 1633 or 1 888 HCL INTL® (425 4685) Fax Free: 1 800 447 2923**  
**Web Site: <http://www.hcl-intl.com> • E-mail: [hcl@hcl-intl.com](mailto:hcl@hcl-intl.com)**

## Instructions for the Ampule Opener #7371



1. Insert the stem of the ampule into the open end of the ampule opener.



2. Score the stem by gently squeezing the opener while turning the ampule.



3. While firmly holding the ampule, push the ampule opener outward using your thumb and finger to break the stem of the ampule.



4. Push down on the ampule rod to eject the ampule head.



**Call Free: 1 800 848 1633 or 1 888 HCL INTL® (425 4685) Fax Free: 1 800 447 2923**  
**Web Site: <http://www.hcl-intl.com> • E-mail: [hcl@hcl-intl.com](mailto:hcl@hcl-intl.com)**