

INSTRUCTIONS FOR

Draw-Tight Seals



Step 1. Insert the tail of the seal through the item being sealed and into the barrel of the seal.



Step 2. Pull the tail to tighten the seal.



Step 3. To remove the seal, pull the tear-away rod away from the seal tab and away from the item being sealed.

Call Free: 1.800.848.1633 • Fax Free: 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com