
Instructions for Kango Vinyl, Polyurethane, Fabric & Wood Seat Chairs

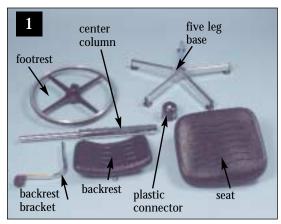

1. When you receive your chair it should include the following: 1 five leg base, 1 center column, 1 seat, 1 backrest, 1 optional footrest on items (#8423, 8428, 11692, and 11703), 1 plastic connector (attached to five leg base), and 1 backrest bracket for attaching backrest.



2. A. If your chair has a footrest, slide the footrest onto the bottom of center column and position it at the desired level. The footrest position can be adjusted later when the user is sitting on the chair. **B.** Tighten the footrest with the adjustable knob (turn clockwise) when in the desired position.



Chairs With Footrest: • 8423 • 8428 • 11692 • 11703



3. Insert the larger end of the center column into the 5-leg base. Push the center column into the base

Chairs Without Footrest:

- 8424
- 11686
- 11704
- 11705
- 11692
- 11693
- 11694
- 8427
- 8429

until it stops.

Kango® is a registered trademark of Biens Company

REV.121702

Instructions for Kango Vinyl, Polyurethane, Fabric & Wood Seat Chairs




 Slide the peg on the underside of the seat onto the top of the center column. Push the seat down until it latches into place.



5. Adjust the seat height with the lever under the chair seat.




Slide the backrest bracket into the black slotted piece on the bottom of the seat.

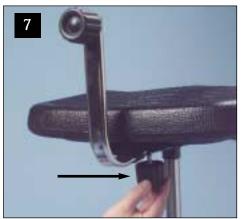

7. Turn the knob under the seat clockwise to secure the bracket securely in place.



 Turn the knob on the backrest bracket counterclockwise to retract the screw so that the backrest will slide into the bracket.

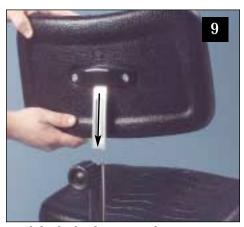


9. Slide the backrest into the backrest bracket.



Instructions for Kango Vinyl, Polyurethane, Fabric & Wood Seat Chairs



10. Turn the knob on the backrest bracket clockwise to secure the backrest at the desired position.

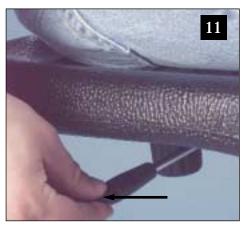

11. Adjust the seat to your desired sitting height using the lever under the chair seat.



12. Your chair is now assembled and ready for use.

