

# INSTRUCTIONS FOR

## Patient Cabinet w/Keypad (#3787)

**NOTE:** Be sure to select the appropriate mounting hardware to ensure safe and reliable use. Mount hardware through a stud, blocking or rigid structure where possible during installation.

**CAUTION:** Do not keep the keys inside the safe itself!

### Opening the safe

**Step 1.** Enter the user code 159, the yellow light will light up.

**Step 2.** Press the A or B button, the green light will light up. Turn the knob and pull out; the door is now open.

### Closing the safe

**Step 1.** Close the door and turn the knob to the left to lock the safe.

### Changing your code

**Step 1.** Open the safe.

**Step 2.** Press the red reset button on the inside of the door and the yellow light will light up indicating the user code is ready to be changed.

**Step 3.** Enter your new user code

**Step 4.** Press the A or B button, two beeps will sound confirming the change. (If a yellow light flashes and three beeps sound, your code is invalid and you must repeat the process.)

### Emergency safe access

**Step 1.** Remove the override cover in the middle of the safe.

**Step 2.** Insert the override key.


**Step 3.** Turn the key to the left then turn the knob to the right to open the safe.

### Installing/Replacing the battery

If the batteries are low, the red light at the top of the number panel will light up.

The safe requires 4 AA (1.5V) Batteries.

Open the safe, push the battery cover plate on the back of the door and install the batteries. Ensuring the batteries are fitted with the correct polarity.

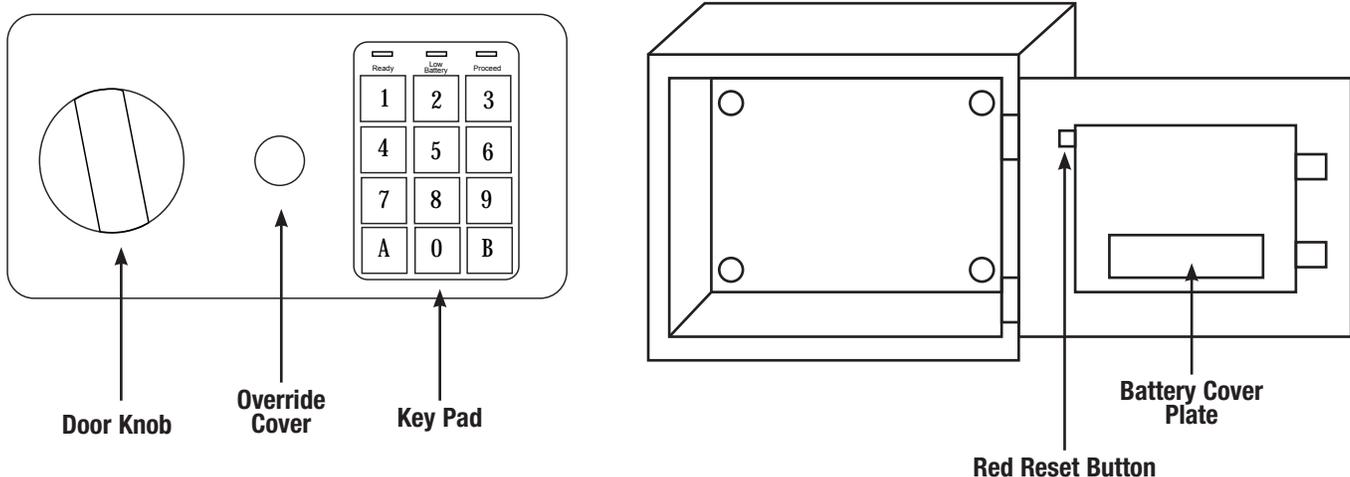

Call Free 1.800.848.1633 • Fax Free 1.800.447.2923

Web: [www.GoHCL.com](http://www.GoHCL.com) • Email: [hcl@GoHCL.com](mailto:hcl@GoHCL.com)