



INSTRUCTIONS FOR EZ Grid™ Thermal Transfer Label Application

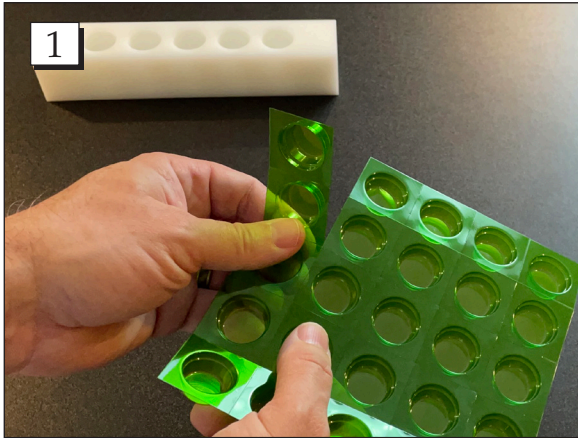

Step 1. Tear five blisters from the 25.

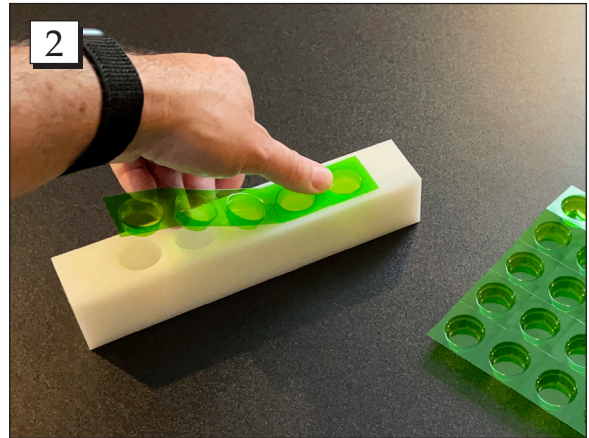

Step 2. Place the blisters in the white blister insert.



Step 3. Remove five labels from the roll and align to the blisters.



Step 4. Use the roller with firm pressure to adhere the labels to the blisters.

Note:

For best results, let the adhesive set for 24 hours prior to opening.

To separate blisters, crease a row at a time by bending it back and forth, then tear it from the sheet. Repeat with individual blisters.

