


ASSEMBLY INSTRUCTIONS FOR

Electronic Locking Box with Handle & Wall Mount Bracket (#18338)



NOTE: Be sure to select the appropriate mounting hardware to ensure safe and reliable use. Mount hardware through a stud, blocking or rigid structure where possible during installation.

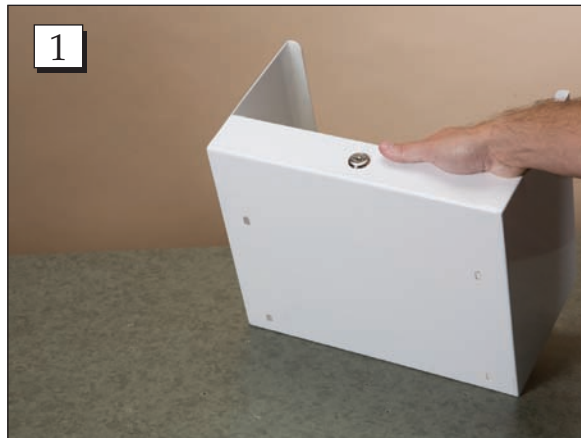

Step 1. Tilt the bracket up to allow for easy access of the mounting holes.



Step 2. Line up the support holes with the holes in the bracket.



Step 3. Select the provided screw and nut. Secure them hand tight through the hole in the support and bracket. Repeat on the hole below.



Step 4. Use a wrench or a pair of pliers to hold the nut and tighten both screws.

Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923
Website: www.HealthCareLogistics.com • Email: hcl@HealthCareLogistics.com

ASSEMBLY INSTRUCTIONS FOR

Electronic Locking Box with Handle & Wall Mount Bracket (#18338)



Step 5. Repeat steps two through five on the opposite side.



Step 6. With help, hold the bracket against the wall and mount one of the holes in the bottom of the bracket at the desired location on the wall.



Step 7. Use a level on the front to secure the remaining three holes. (It's recommended to hit a stud on two of the four holes).



Step 8. Place the security box in the bracket. Be sure to push the box to the back of the bracket.



Step 9. Use the key provided to lock the security box in the bracket.

Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923
Website: www.HealthCareLogistics.com • Email: hcl@HealthCareLogistics.com

ASSEMBLY INSTRUCTIONS FOR

Electronic Locking Box with Handle & Wall Mount Bracket (#18338)

To Setup Security Box for Initial Use:

1. Remove the small plastic black cover to the left of the control panel to expose the lock.
2. Insert key and turn key clockwise to lock and counterclockwise to unlock. Turn knob counterclockwise to unlock and pull Security Box to open.
3. Batteries need to be installed for the Control Panel to operate. Batteries are included inside of Security Box.
4. Remove cover on battery compartment on inside of door by pushing down on cover in direction of arrow to open. Insert four batteries into compartment. Replace compartment cover.
5. Close Security Box and proceed to "Program your Personal Identification Number."

To Program your Personal Identification Number (PIN) — 3 to 8 digits:

1. Turn knob counterclockwise and pull door open.
2. Press the red button on the inside of the door on the right side of the battery compartment to reset PIN.
3. Close the Security Box door and re-lock. Note the override lock must be in the lock position in order for the Security Box to lock using PIN. Now select and enter your PIN digits and then press the "#" key to confirm your PIN. A beep will sound for each key pressed. After the "#" key is pressed, a green light goes on to indicate success. Be sure to write down this code immediately and store it somewhere safe.
4. Turn knob counterclockwise and the Security Box will open.

To Operate Security Box:

1. Input your own PIN (the number you have selected) then press the "#" key. Turn knob counterclockwise and the Security Box will open.
2. After entering your PIN, you have 5 seconds to turn the knob before the mechanism relocks. If it relocks, please reenter your PIN. Don't forget to press the "#" key after entering your PIN.

CAUTION: If an incorrect group of numbers is entered, a red light will flash and the Security Box will not open. Entering an incorrect PIN 3 times will freeze the system for 20 seconds.

IMPORTANT

1. If you forget your code, you can use the manual override key. DO NOT keep the override key(s) in the Security Box. Remove the small black rubber cover to the left of the control panel to expose the override lock. To use the override key, insert key and turn key counterclockwise, turn knob counterclockwise and pull Security Box to open.
2. Please make a note of the following details and keep them independent of the Security Box as these details will be needed if a service call is required: The Key Number, and the Security Box Number (the Security Box number is either on a small sticker beside the override lock cover or on the head of the override lock itself.)
3. A steady red light showing on the top right of the control panel indicates low batteries. Change batteries by removing the battery housing cover on the inside of the Security Box door, and then replace all batteries.
4. If the digital lock does not work because of low battery, use the override key to open the Security Box, and then replace all batteries.