
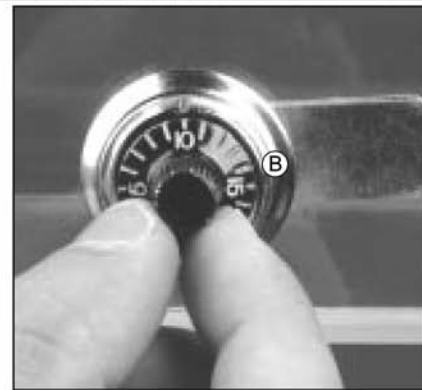


Combination Security Lock

- This small combination lock replaces keyed cam locks to eliminate lost keys that result in costly replacements.
- The combination lock can provide limited access to the product being secured because the number of users with the combination can be limited.
- The Combination Security Lock replaces most $\frac{3}{8}$ " (19mm) diameter keyed cam locks.
- The lock can be used on a variety of product materials: wood, metal, plastic, and acrylic.
- The Combination Security Lock provides security for cabinets, drawers, refrigerator boxes, security boxes, and more. **See the price list below for HCL's products using the Combination Security Lock.**

Details:

- cam lock
- mounts in material up to $\frac{5}{8}$ " (16mm) thick
- three digit combination
- all hardware is included

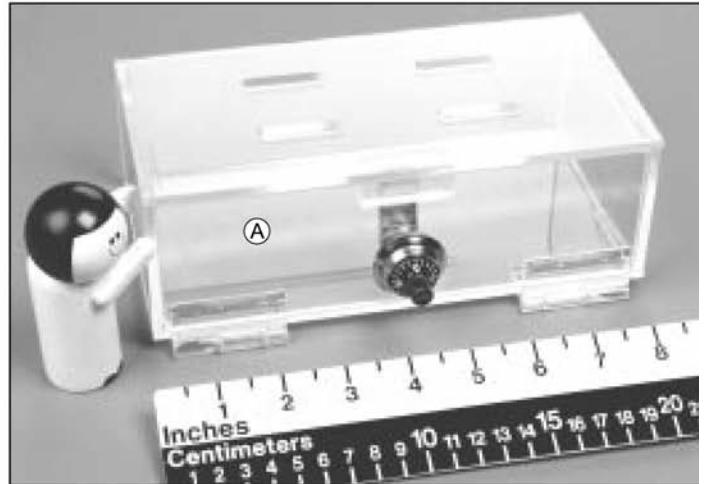

1. Push the lock in and turn the dial right two whole turns and stop at your first number_____.
2. Push the lock in and turn the dial to the left one whole turn past the first number and stop at your second number ____.
3. Push the lock in and turn the dial to the right to the third number____. To open pull out on the dial and turn it to the right to move the cam inside the box to the unlocked position.

Products that the 3767 Combination Security Lock will Fit

3746-01 Compact Hinged Door Locking Refrigerator Box, single locking

3747-01 Compact Hinged Door Locking Refrigerator Box, double locking

3748-01 Small Hinged Door Locking Refrigerator Box, single locking

3749-01 Small Hinged Door Locking Refrigerator Box, double locking

1559-01 IV Locking Box

3722 Shallow Acrylic Locking Refrigerator Box

3878-01 Compact Storage Cabinet with Cam Lock

3725 Stainless Steel Small Locking Refrigerator Box, Gray Styrene Drawer

3735 Stainless Steel Small Locking Refrigerator Box, Acrylic Drawer

3728 Acrylic Small Locking Refrigerator Box, Gray Drawer

3721 Acrylic Small Locking Refrigerator Box, Acrylic drawer

1359, 1357 Security Cassettes with Locking Drawers extremely time consuming, recommended not to do

5510L 5515L, 5530L, 5540L, 5545L, 5550L-01, 15551L-01, 5552L-01, 5531L, 5532L, 5533L, 5534L, 5535L, 5536L, Hinged Lid Transfer Boxes

1452 Security Drug Case

3706-01 Double Locking Narcotic Cabinet

3707-01 Double Locking Narcotic Cabinet

3711 Single Locking Refrigerator Top Only (3712)

3718 Refrigerator Box, Double Locking Top Only (3715)

Call Free 1 800 848 1633 or 888 HCL INTL® (425 4685) • Fax Free 1 800 447 2923

International Call 740 477 1686 • International Fax 740 477 2923 • Web site: www.HealthCareLogistics.com • E-mail: HCL@HealthCareLogistics.com