


INSTRUCTIONS FOR EZ Grid™ Laser Label Application

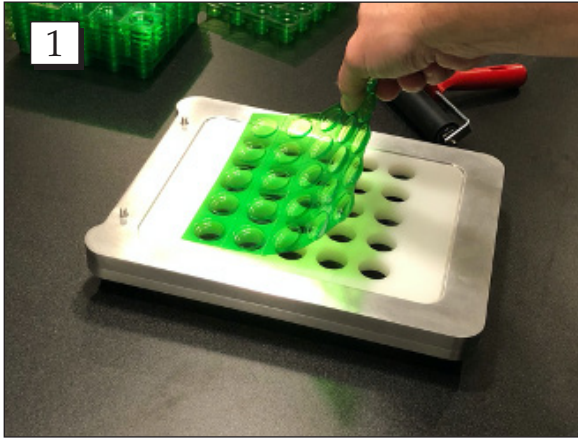


Step 1. Place the blisters into the white blister insert.




Step 2. Remove the backing from the labels to expose the adhesive.



Step 3. Place the labels onto the locating pins and gently lay the labels onto the blisters.

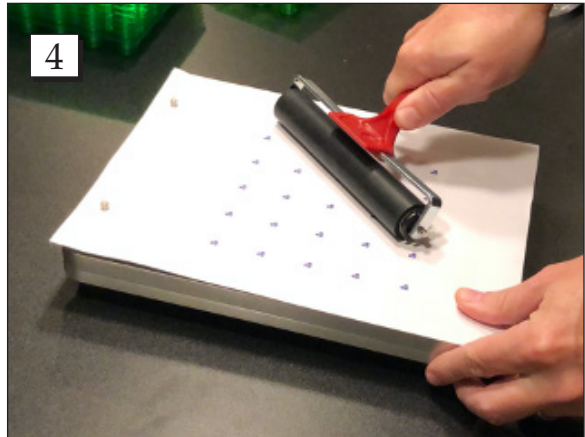

Step 4. Use the roller with firm pressure to adhere the labels to the blisters.

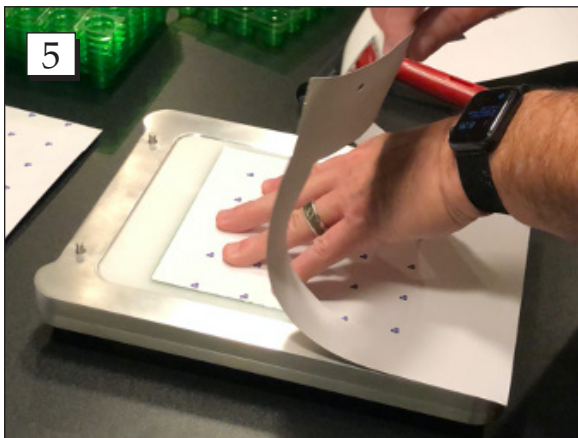

Step 5. Stabilize the blisters with one hand and pull the label frame off of the location pins. Pull the frame away completely while stabilizing the edges and corners with your fingers to have a clean tear away.



Note:
For best results, let the adhesive set for 24 hours prior to opening.
To separate blisters, crease a row at a time by bending it back and forth, then tear it from the sheet. Repeat with individual blisters.

