

INSTRUCTIONS FOR Applying Labels to Blisters using the Foam Sealing Tray

CLASS A


Size	Blister Item Number/ Description	Color	Compatible Laser Labels	Compatible Tray
Small	7016 Small Aclar	Amber	6121	6472
	7074 Small PVdC	Amber	6121	6472
Medium	7014 Medium Aclar	Amber	6121	6472
	7075 Medium PVdC	Amber	6121	6472
Large	7015 Large Aclar	Amber	6121	6472
	7076 Large PVdC	Amber	6121	6472
Shallow Round	7021 Round 3/8" Depth	Amber	6125	6461
	7022 Round 3/8" Depth	Green	6125	6461
	7023 Round 3/8" Depth	Blue	6125	6461
Deep Round	7024 Round 1" Depth	Amber	6125	6464
	7025 Round 1" Depth	Green	6125	6464
	7026 Round 1" Depth	Blue	6125	6464
Condensed	7019 Condensed Aclar	Amber	6123	6462
	7079 Condensed PVdC	Amber	6123	6462
Micro	7017 Micro	Amber	6027	6468
Medium	7004 Blister Block	Amber	6126	6460

CLASS B

Size	Blister Item Number/ Description	Color	Compatible Laser Labels	Compatible Tray
Small	7013 Small	Amber	6118	6470
Medium	7012 Medium	Amber	6118	6470
Large	7011 Large	Amber	6118	6470
Extra Large	7010 X-Large	Amber	6122	6469
Condensed	7007 Condensed	Amber	6123	6462
Keyhole	7006 Keyhole	Amber	6118	6473




Step 1. Prepare the labels that will be applied to the blisters with the pertinent information, such as name of drug, expiration date, lot number, etc.

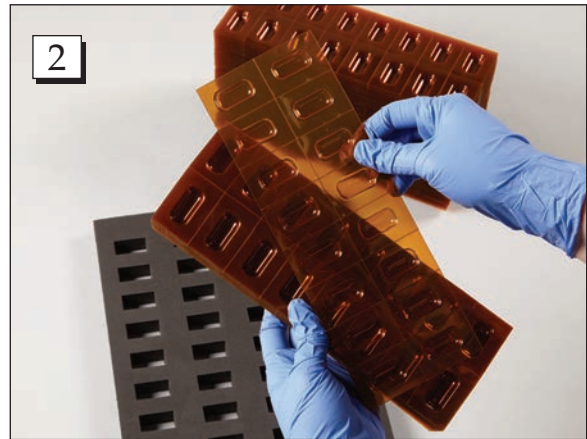

Step 2. Remove a sheet of two blister strips from the blister stack.

Call Free 1.800.848.1633 • Fax Free 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com

INSTRUCTIONS FOR Applying Labels to Blisters using the Foam Sealing Tray

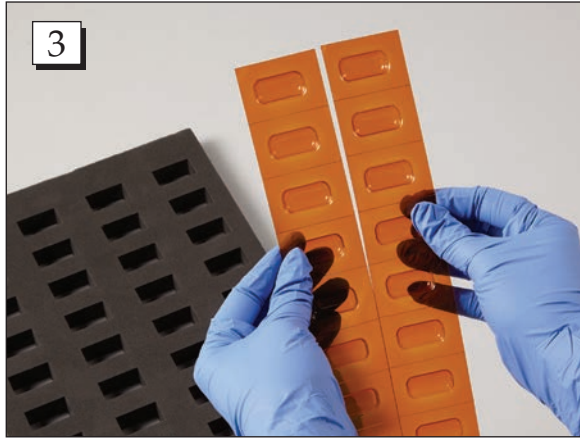

Step 3. Tear the sheet into two individual blister strips and place them in the tray. Repeat steps 2 & 3 for two more blister strips.



Step 4. Fill each blister cavity with a tablet or capsule.



Step 5. Peel a strip of labels from the 8½ x 11 sheet of laser labels.



Step 6. Holding the label strip by the edges on either end, apply the label strip to a row of blisters in the sealing tray by matching the notches on the labels with the edges of the blisters.



Step 7. Gently press the labels onto the blisters.



Step 8. Enhance the seal by applying moderate pressure to the sealed blister strips using a sealing roller.

Call Free 1.800.848.1633 • Fax Free 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com

INSTRUCTIONS FOR Applying Labels to Blisters using the Foam Sealing Tray



Step 9. Remove the strips from the sealing tray.



Step 10. Each blister can be torn from its strip and stored or dispensed to the patients.



Call Free 1.800.848.1633 • Fax Free 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com